# **ZENCONTROL** IR commissioning controller **datasheet**



1300 943 233 info@lumenresources.com.au lumenresources.com.au



#### Features

The hand-held zc-ir-ctrl-com remote is fitted with 44 buttons that provides extensive luminaire programming functions ideal for commissioning.



Adjustable brightness in steps or smaller increments

Adjustable cool white to warm white colour control



50

Emergency and emergency testing options



Extensive luminaire programming functions ideal for commissioning

# **ZENCONTROL** IR commissioning controller **datasheet**



1300 943 233 info@lumenresources.com.au lumenresources.com.au



### **Product range**

Order code Description	
zc-ir-ctrl-com	Hand-held infrared control and commissioning unit

#### Features

- 44 buttons
- Dimming control
- Colour temperature control
- Occupancy sensor commissioning
- Emergency test commissioning
- Lux sensor commissioning

### **Specifications**


Туре	Infrared	
IR frequency	38 kHz	
Operating range	≈ 5 m	
Buttons	44 (pre-configured)	
Material	PC	
Battery	CR2025 Lithium coin-cell	

## Supported models

Order code	Description
zc-pir-8m-p	8 m, PIR and lux sensor, with IR expansion kit for zc-smart-driver
zc-pir-nano-p	5 m, PIR and lux sensor, with IR expansion kit for zc-smart-driver, nano form factor
zc-mw-p	Microwave and lux sensor, with IR expansion kit for zc-smart-driver

For use with zc-smart-driver range

### Dimensions (mm)

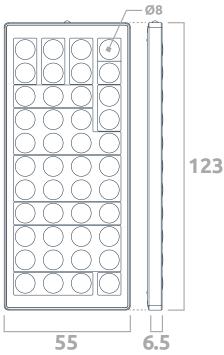

# **ZENCONTROL** IR commissioning controller **datasheet**



1300 943 233 info@lumenresources.com.au lumenresources.com.au

### Functions

Symbol	Function	Description
ON	On	Switches the luminaire on.
OFF	Off	Switches the luminaire off.
<ul><li></li><li></li><li></li></ul>	Dim up/down	Dims the luminaire up/down for 200ms.
STIP STIP	Step up/down	Steps the luminaire up/down.
ŵ.	Cooler	Steps the colour temperature cooler.
ţ,	Warmer	Steps the colour temperature warmer.
Lux		
SET	Set lux level	Sets lux light level from current light level. The luminaire will step up/down to maintain lux light level.
SET	Set dusk level	Sets dusk level from current light level. The luminaire will turn on if light level is less than dusk level.
於/述 DISABLE	Disable lux/dusk	Disables lux/dusk mode.
Wireless		
(()) DISCOVER	Walk test	Initiates a 30 second walktest
E MODE	Reset mode	Resets mode and ECG data
Sensor		
R	Absence mode	Absence mode activated. The switch must be turned on when someone enters a room, but the sensor detects when the room is vacated, switching off the lights automatically.
Ř	Presence mode	Presence mode activated. The sensor will automatically turn lights on when movement is detected. (Default)
DISABLE	Disable PIR	Disables the PIR sensor.

Symbol	Function	Description
min	Idle-time	Set idle time to 4 / 9 / 14 / 19 minutes. Idle time minutes after the last presence was detected, lights will dim to warn-level. (Default 14 min)
min	Warn-time	Set switch-off delay to 0 / 1 / 5 minutes or infinite Light is switched off after warn-time has expired. (Default 1 min)
	Warn-level	Set the warn level to 1 / 10 / 20 / 30 %. Level to which the lights are dimmed after the idle-time has expired. (Default 1%)
Switch		
80	Dimmer	Configure switch input as dimmer.
ВССТ	Colour dimmer	Configure switch input as colour temperature dimmer.
BON	Switch on	Configure switch input as on switch.
BOFF	Switch off	Configure switch input as off switch.
Emergency	y	
DURATION	Duration test	Start standard duration test. If in AU/NZ and set to 2 hour emergency mode the test will run for 90 min, otherwise the test will run based on the set emergency mode.
EXTENDED	Extended duration test	Start extended duration test, based on the set emergency mode.
FUNCTION	Function test	Start function test.
STOP	Stop test	Stop any tests running.
<b>⊖8</b> hr	Set emergency mode	Set emergency mode to 2 / 3 / 4 / 8 hours.
General se	ttings	
SET POWER ON LEVEL	Set power on level	Set power on level from current level.
SET	Set max power level	Set max level from current level.
SET B	Set min power level	Set min level from current level.
52	Reset all	A complete factory reset, clears all settings, including standalone mode settings

V**1.4**